

OPERATORS INSTRUCTIONS (CROCHEVIT)

Only use this equipment for individual protection (fall arrester). This equipment must not be modified in any way and no other equipment should be added to it or combined with it.

After a FALL, if the equipment is DAMAGED or needs REPAIR, it must be returned to the manufacturer or authorized agent.

The equipment should be inspected visually before use.

The equipment MUST be checked every year by an authorized person in accordance with the instructions of the manufacturer or its agent.

If when the equipment is checked there is any doubt about its general condition (corroded metal, stitching in poor condition, abnormal deformation, etc) consult the manufacturer or its agent.

The anchorage points must have a minimum strength of 10KN and must be above the working position.

Be sure to comply with the recommendations for use of any other equipment that is used in conjunction with this arrester.